 


Kodak SS500 Scanner Quick Reference Guideline

Before you scan

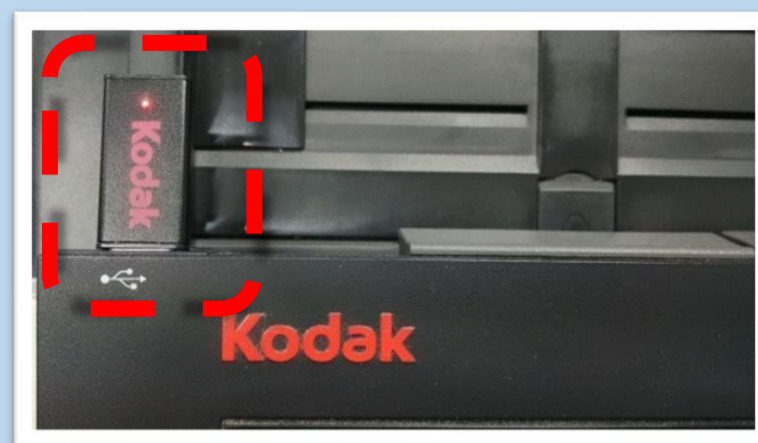 


✓ Place the document or book onto the document feeder or scanning platform.

✓ Insert the USB flash drive into the scanner.

Scan setting

Select the desired preset profile.

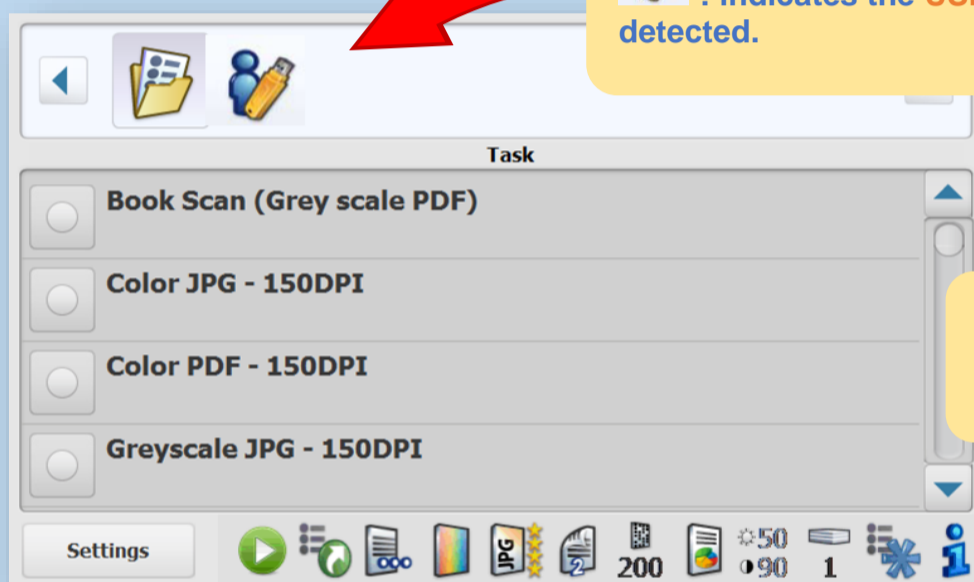

 
 
 : indicates the USB flash drive has been detected.

Alternatively, you can use the advanced options to modify the scanning settings.


Start and finish

First, press  button on the top of the screen, select your USB flash drive.

After the scanning is completed, check the [Save to USB Drive] option and press the [Done]* button to finish.

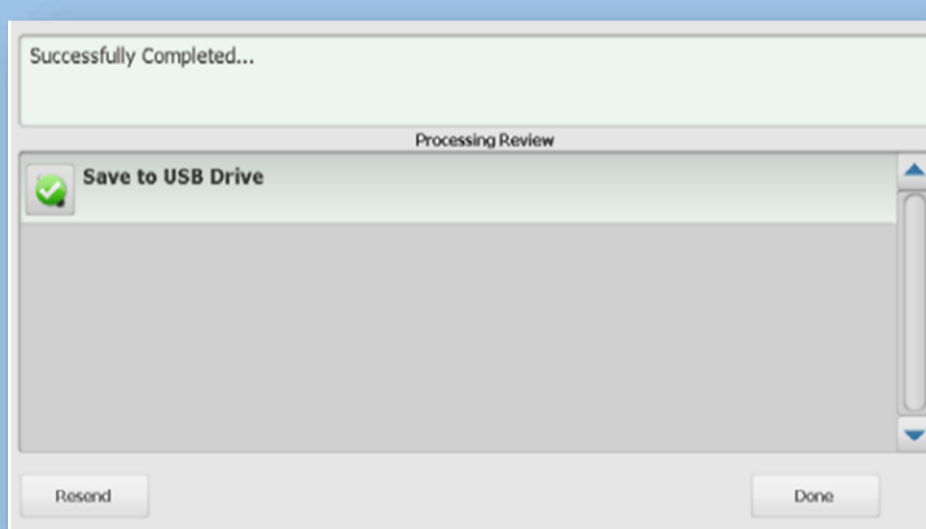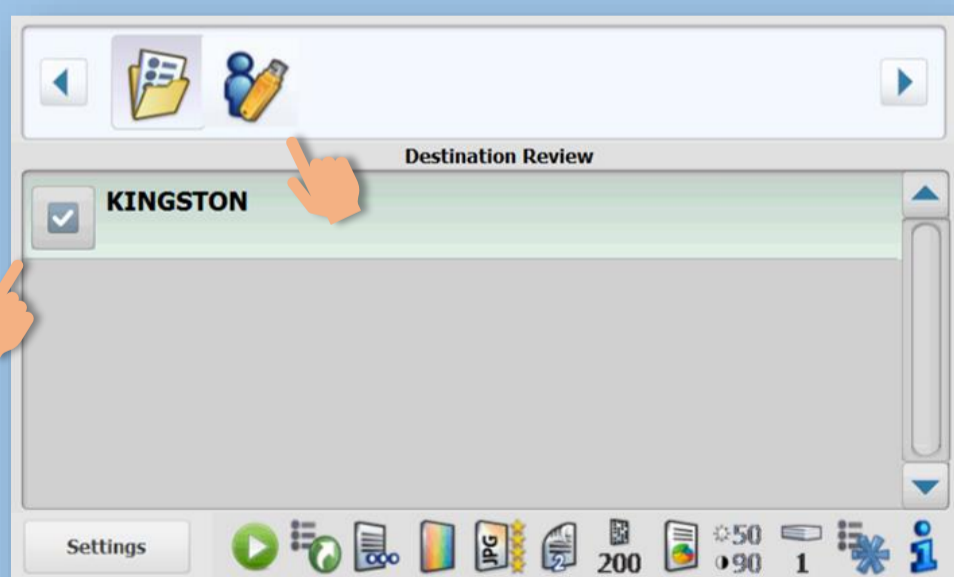

Then, press  or  hard button at the bottom of the screen.

If you do not need to preview, simply press  Scan to start.

* When "Done" is selected, the message, "Do you want to remove your current selections?" will be displayed.

- Select "No" to keep your destination and scan settings for the next scan job.
- Select "Yes" and your destination and scan settings will be reset to the Scan Station default values.

If you encounter any issues with the scanner, please feel free to visit the **IT service counter** for assistance. Thank you.

TEL ☎: 8822 8180

e-mail ✉: lib_sit@um.edu.mo